


LED Wireless Driver

- RF 2.4GHz wireless signal, no need signal cable.
- Dimming, CT, RGB, RGBW LED lights can be controlled.
- Compatible with F series remote.
- Compatible with EX series touch panel.
- Support APP and intelligent speaker control if equipped with wifi-108 gateway.
(note: only with L-BUS identity can support advanced mode.)



F4-3A

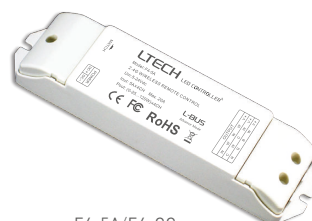



F4-5A/F4-CC

FC CE RoHS

(warranty 5 years)



System diagram

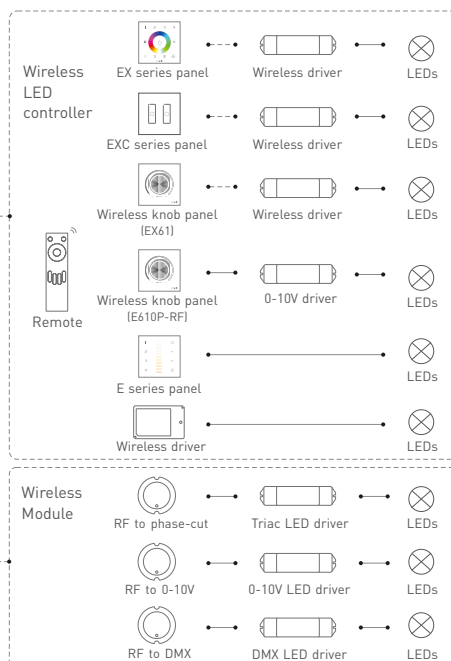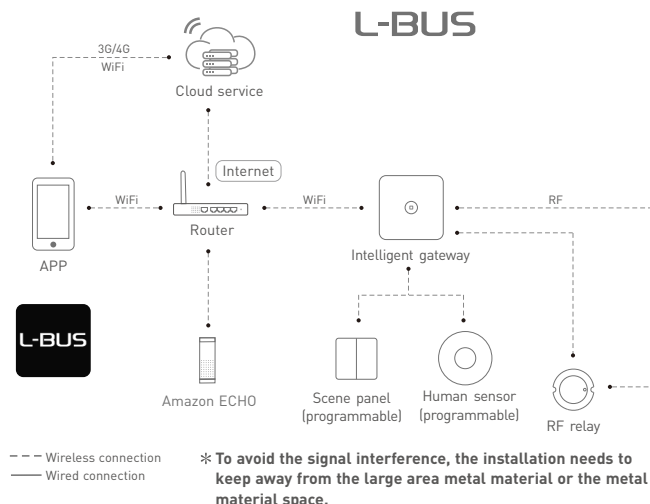


Specification


Model	F4-3A	F4-5A	F4-CC
Name	CV LED wireless driver		CC LED wireless driver
Wireless signal	RF 2.4GHz		
Input voltage	5~24Vdc		12~48Vdc
Output voltage	5~24Vdc		3~46Vdc
Current load	3A × 4CH Max. 12A	5A × 4CH Max. 20A	CC 350/700/1050mA ×4CH
Output power	[0~15W...72W] × 4CH Max. 288W	[0~25W...120W] × 4CH Max. 480W	(1.05W~48.3W) × 4CH Max. 193.2W
Protection	Reverse connection protection	Over current / Over-heat / Short circuit / Open circuit / Reverse connection protection, auto recovers.	
Working temperature	-30°C~55°C		
Product size	L125×W33×H20[mm]	L175×W44×H30[mm]	
Package size	L127×W35×H22[mm]	L178×W48×H33[mm]	
Weight[G.W.]	60g	150g	165g

Product size

Unit: mm

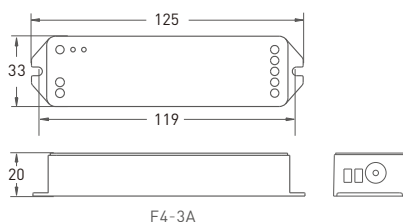


F4-3A

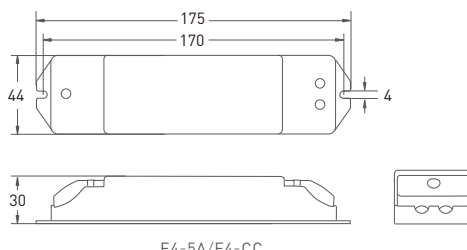

F4-5A/F4-CC

Terminal description

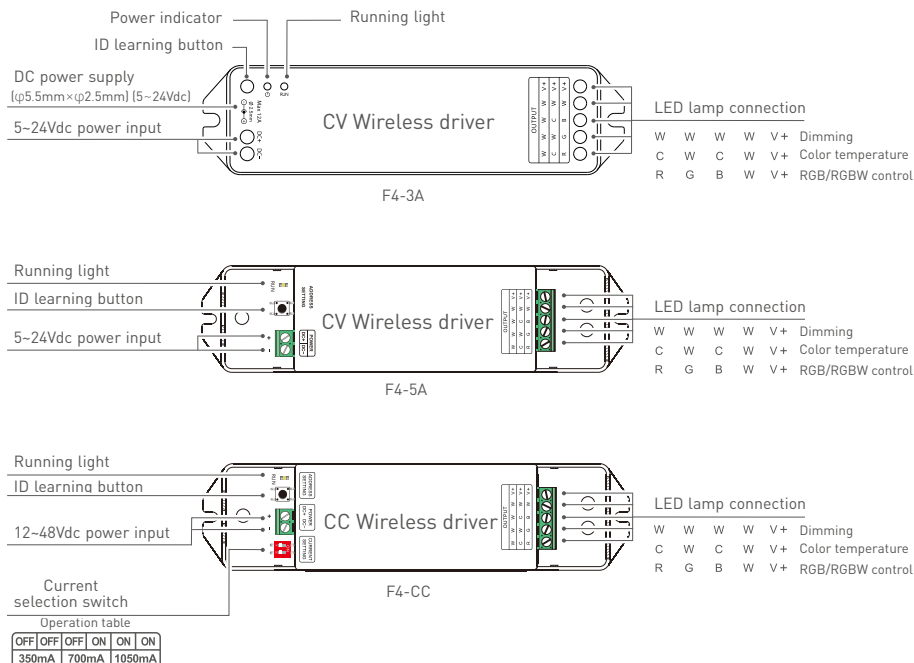

Match code (ID learning button method)

Step 1:

Short press "ID learning button" on driver, the lamps flicker, please complete step 2 within 15 seconds.



Step 2:

Match with F series remote:

Single zone remote: Long press "On/Off" key.

Multi-zone remote: Long press the matching zone's "ON" & "OFF" keys simultaneously.



Match with EX series panel:

Single zone panel: Long press "On/Off" key, then press any key.

Multi-zone panel: Long press "On/Off" key, then press the matching zone key.

* Please match code when panel is power-on.



Match with WiFi gateway:

Turn on APP, enter "zone set" interface, click the right top "MATCH" key, then follow the prompts.



Step 3:

The lamps of driver flicker quickly and then stop flickering (F4-5A and F4-CC produce a long beep), match code successfully.

Match code (power on method)

Step 1:

The driver power off.



Step 2:

Match with F series remote:

Single zone remote: Hold down "On/Off" key, meanwhile the driver power on.

Multi-zone remote: Hold down the matching zone's "On" & "Off" keys simultaneously, meanwhile the driver power on.



Match with EX series panel:

A. Single zone panel: Long press "ON/OFF" key until all indicator light flicking.

Multi-zone panel: Long press "ON/OFF" key until all zone's indicator light flicking.

B. The driver power on, the lamps flicker slowly, please complete step C within 15s.

C. Single zone panel: press any key on panel.

Multi-zone panel: press the matching zone key.

* Please match code when panel is power-on.



Match with WiFi gateway:

Turn on APP, enter "zone set" interface, click the right top "MATCH" key, then follow the prompts.



Step 3:

The lamps of driver flicker quickly and then stop flickering (F4-5A and F4-CC produce a long beep), match code successfully.

Clear code (ID learning button method)

Long press "ID learning button" on driver for 10 seconds, If the lamps flicker 5 times, deactivate the matching successfully.



Clear code (power on method)

Power on and off driver continuously for 10 times(F4-5A and F4-CC produce a long beep), If the lamps flicker 5 times, deactivate the matching successfully.



* No further notice if any changes in the manual.
Product function depends on the goods.
Please feel free to contact our official distributor if any question.